

## ASSEMBLY INSTRUCTIONS

## Albermarle Large Bracketed Wall Lantern

Item # CHO 2423


**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

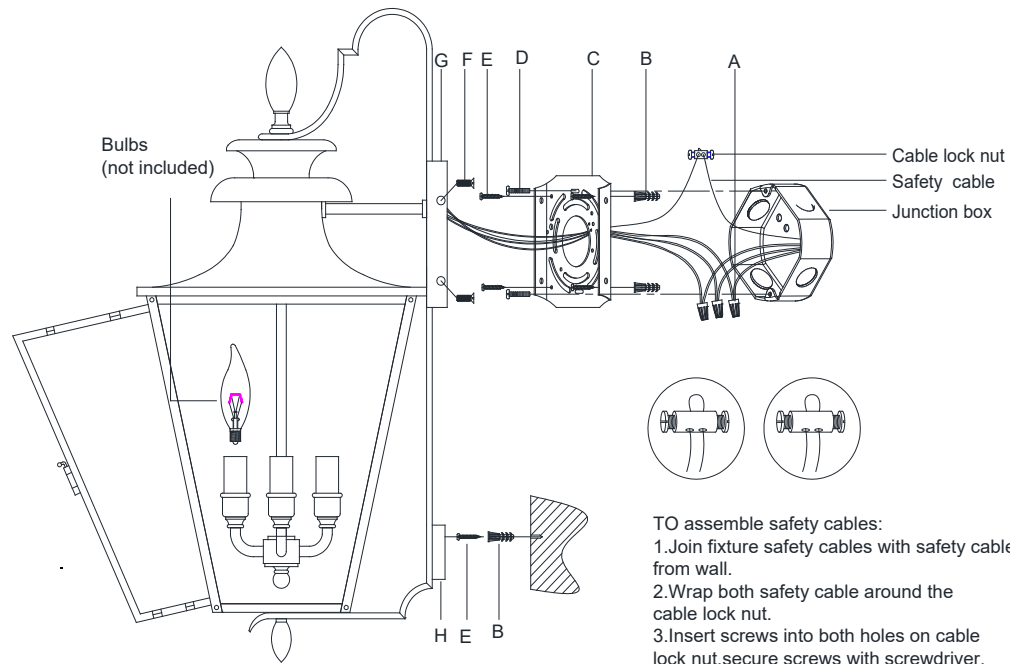

- TO assemble safety cables:**
1. Join fixture safety cables with safety cable from wall.
  2. Wrap both safety cable around the cable lock nut.
  3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
  4. Push the cable lock nut into outlet box.

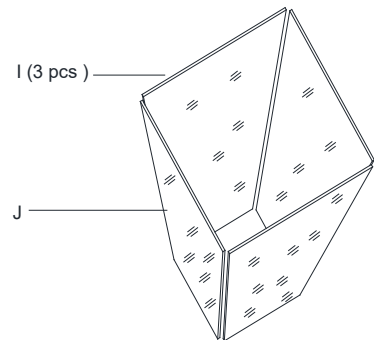


Fig.1


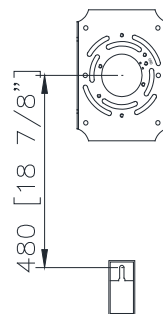


Fig.2

1. Carefully remove all parts from the box.
2. Remove the mounting plate (C) from the backplate (G) by loosening the side screws (F).
3. Put the mounting plate (C) on the wall and mark the holes position with pencil (not included).
4. Drill 4 holes on the wall and knock the anchors (B) into the holes.
5. Affix the mounting plate (C) onto the junction box and secure with the mounting screws (D), then secure the wood screws (E) to the anchors (B) and lock tight.
6. With the fixture dimension as a guide, drill one hole on the wall and make sure the hole will match to the hole on the bracket (H) as shown in figure 2.
7. Knock the anchor (B) into the wall hole, then secure the wood screws (E) to the anchors (B) and make sure the threads with 1/8" are visible.
8. Connect the safety cables as shown in figure.
9. Wrap the fixture ground wire to the green ground screw on the mounting plate (C) and secure, then connect to the junction box ground wire with the wire nut (A).  
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
10. Connect the fixture white wire to the junction box neutral wire with the wire nut (A).
11. Connect the fixture black wire to the junction box hot wire with wire the nut (A).  
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. Attach the bracket (H) to the wall and hook it onto the wood screws (E).
13. Attach the backplate (G) to the mounting plate (C) and secure with the side screws (F).
14. Open the door of the fixture body, place the glass panels (I) on the side of the frame and secure it by bending the metal tabs.

## ASSEMBLY INSTRUCTIONS

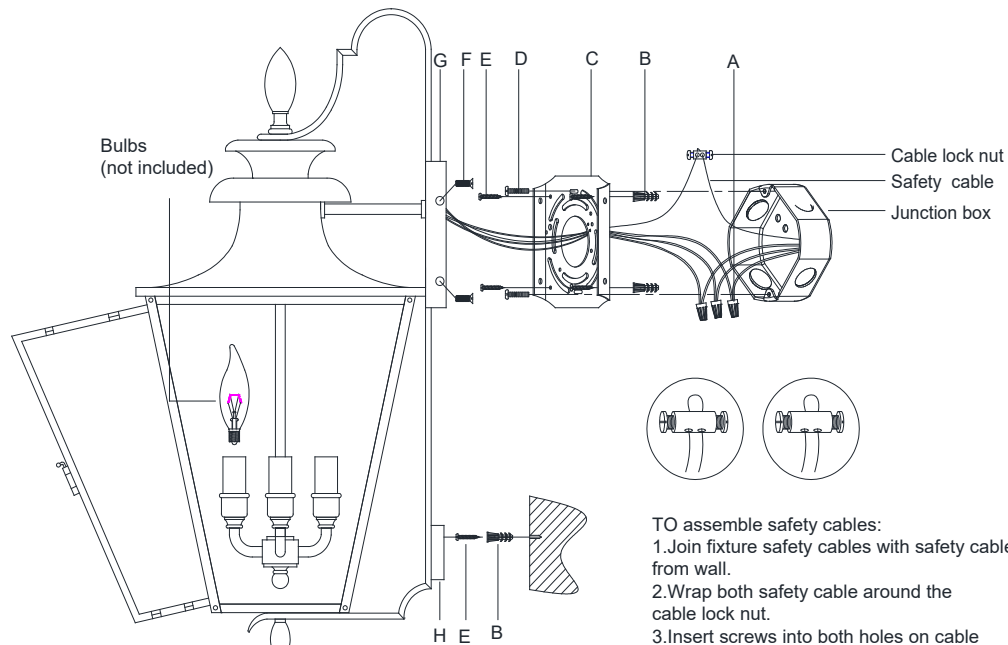

- TO assemble safety cables:
1. Join fixture safety cables with safety cable from wall.
  2. Wrap both safety cable around the cable lock nut.
  3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
  4. Push the cable lock nut into outlet box.

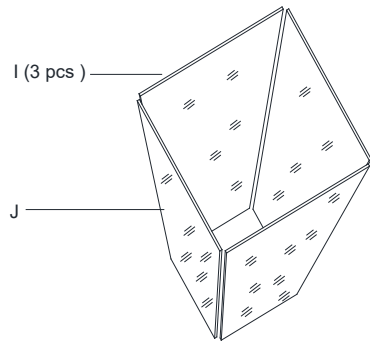


Fig.1

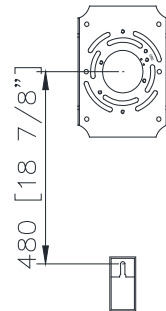


Fig.2

## Albermarle Large Bracketed Wall Lantern

Item # CHO 2423

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

15. Place the glass panel (J) on the door of the frame and secure it by bending the metal tabs.
16. Insert bulbs (not included) into the sockets, then close the door.
17. With silicone caulking compound, caulk completely around where back of canopy meets the wall surface to prevent water from seeping into the junction box.
18. Installation is complete, turn on power at fuse or circuit breaker.

\*\*\*Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.