


BBL5026

ASSEMBLY & INSTALLATION GUIDE

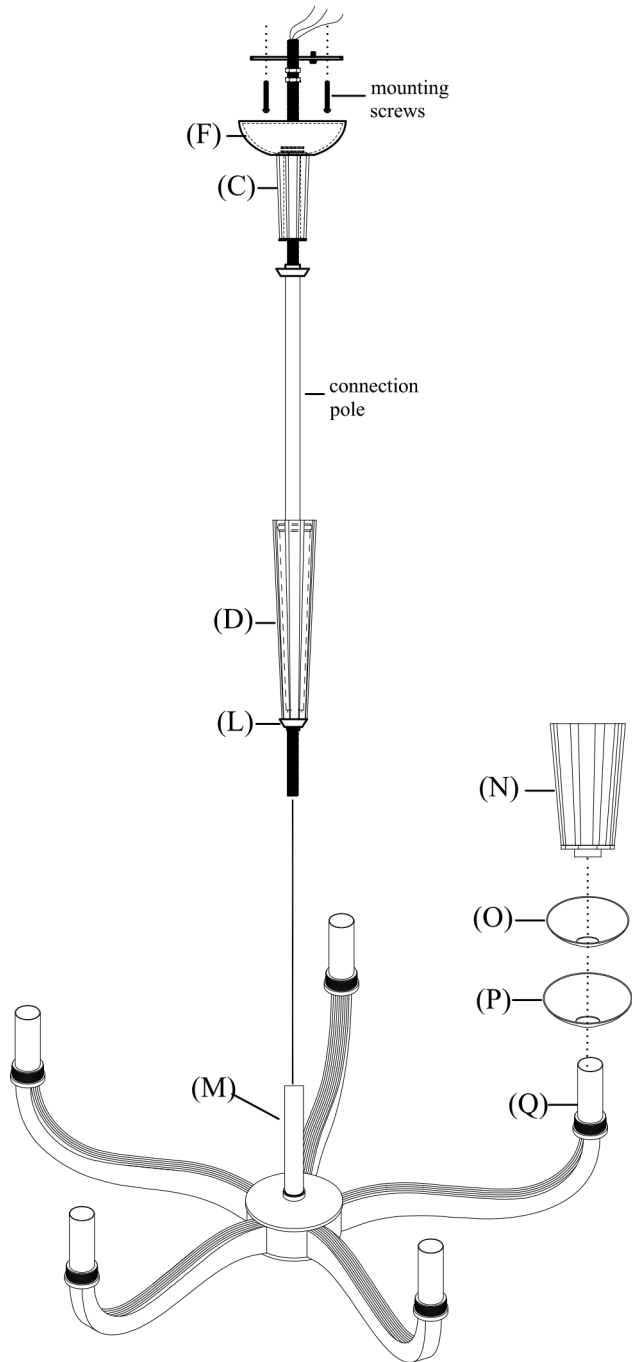

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Remove support pipe with threaded inner pipe from the pole assembly.
2. Loosen hickey with threaded nipple (A) and nuts (B), remove upper pole (C) and lower pole (D) from the threaded inner pipe. Remove part (J) with washer (b), flange (E) and one washer (a) from upper pole (C).
3. Attach glass cover (H) (not included) to upper pole (C) and secure with washer (b) and part (J).
4. Attach glass cover (G) washer (a) and bobesche (F) to threaded section of upper pole (C), replace flange (E) to secure (G) & (F) to pole (C). Note: the washer (a) need be in between of glass canopy (G) and bobesche(F).
5. Remove part (L) and washer (c) from lower pole (D).
6. Attach glass cover (K) (not included) to lower pole (D) and secure with washer (c) and part (L). Slide lower pole (D) with glass cover onto the threaded inner pipe. Slide upper pole (C) with glass cover onto threaded inner pipe.
7. Feed wire through the threaded inner pipe, lower pole (D) with glass cover and upper pole (C) with glass cover.
8. Insert the threaded inner pipe into very bottom of pole (M). Thread part (L) into top threaded opening of pole (M).
9. Replace nuts (B) to top of threaded inner pipe. Attach mounting strap (A) to mounting outlet box with mounting screws provided. Attach threaded inner pipe with fixture to mounting plate (A).
10. Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green or copper wire). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
11. Connect the neutral wire from the fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
12. Attach canopy (F) with upper pole (C) to ceiling outlet and secure by turning support pipe in counter-clockwise.
13. Stop turning once the canopy (F) with glass fully cover the wire connections and touched to the ceiling.
14. Slide glass bobesche (P), followed with metal bobeshe (O) over threaded section of candle tubing (O), screw bottom of shade (N) onto the threaded section of candle tubing to secure the glass shade to the chandelier arm.
15. Insert light bulbs into sockets. Restore power and installation is complete.