

Lune Floor Lamp

ET1361 | 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

General Product Information:


This product is safety listed for dry locations only.

This instruction shows a typical installation.

IMPORTANT SAFETY INSTRUCTIONS


This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS!

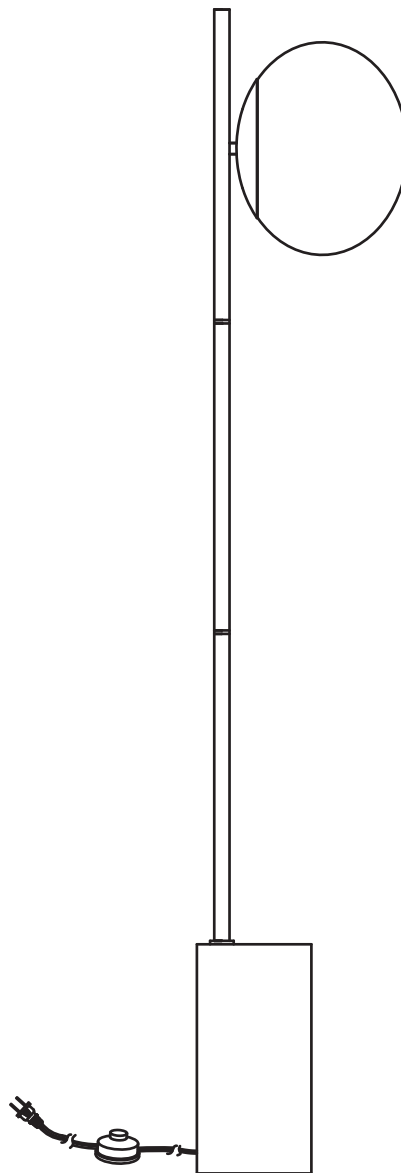

Assemble the Lamp

IA

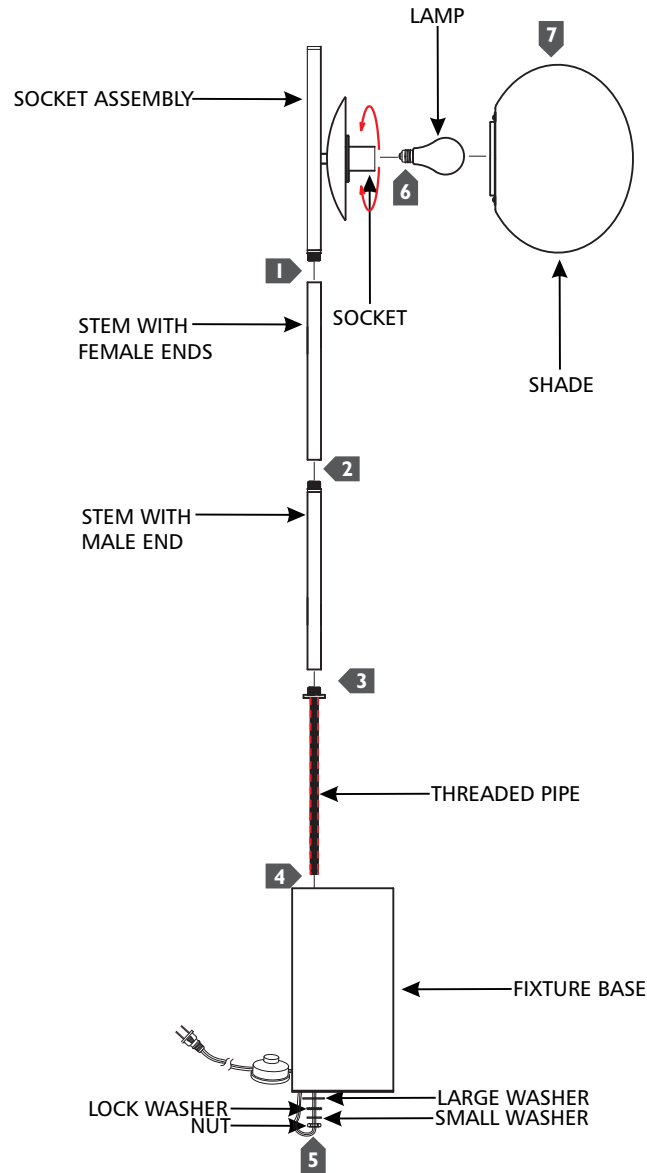

- 1 Screw the socket assembly onto the stem with female ends.
- 2 Screw the stem with male end into the other side.
- 3 Screw the threaded pipe into the other side of the stem with male end.
- 4 Insert the stem assembly into the fixture base and slide the large washer, lock washer, and small washer onto the threaded pipe.
- 5 Screw the nut onto the threaded pipe, ensure that the fixture assembly is aligned then tighten the nut.
- 6 Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage Information.
- 7 Install the shade by screwing it onto the shade base.