
ASSEMBLY INSTRUCTIONS



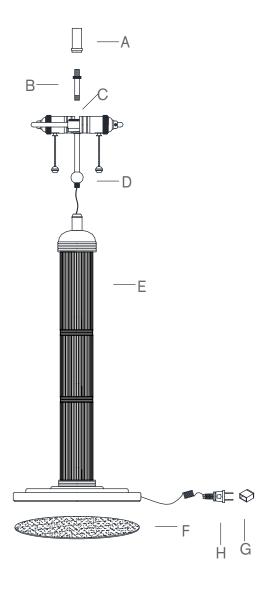

Item # TOB 3001

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- 1. Carefully remove all parts from the carton.
- 2. Thread the nipple (D) into the top joint of fixture body (E).
- 3. Thread the shade riser (B) into top threaded opening of the socket cluster (C).
- 4. Pull the cord tight from cord exit hole.
- 5. Remove backing sheet from felt paper (F), and affix felt paper (F) underneath of the bottom of fixture body (E).
- 6. Insert light bulbs (not included) into the sockets.
- 7. Remove finial (A) from shade riser rod (B), put lamp shade (packed separately) on the shade riser (B) and secure with finial (A).
- B. Remove the protective plug cover (G) from the plug.
- 9. Plug into a proper electrical outlet and test the fixture.





^{***}Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.