

Logan I light Bath

TV1211 1.0

GENERATION LIGHTING

Vanity

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.


This product is safety listed for damp locations.

Incandescent lamps may be dimmed with a standard incandescent dimmer. LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

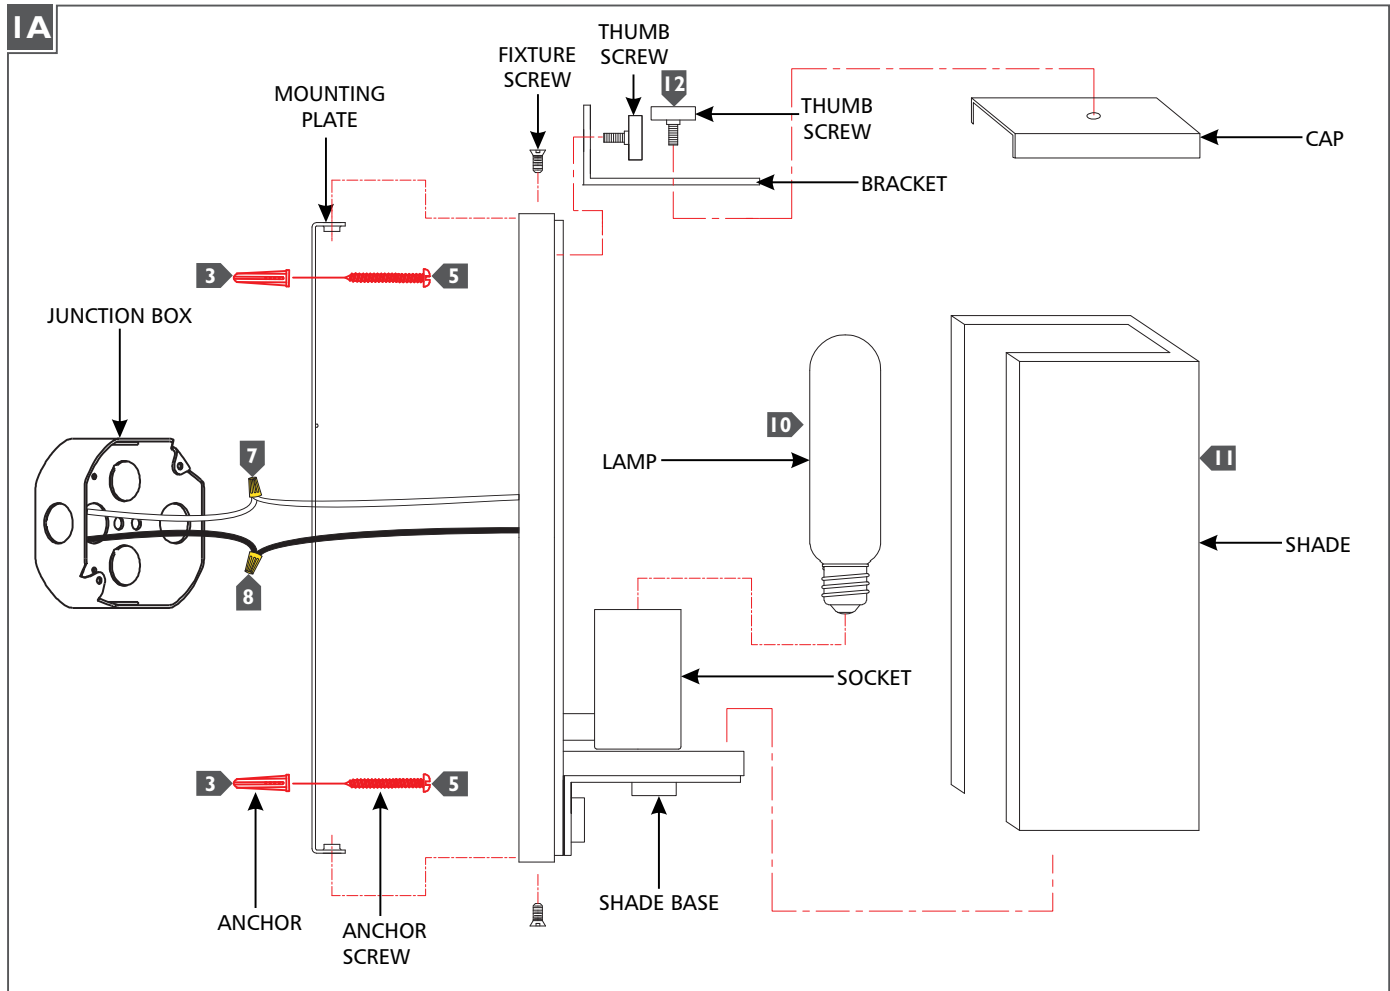

- 1 Temporarily install the mounting plate to the junction box.
- 2 Mark the anchor hole locations through the mounting plate, then remove the mounting plate.
- 3 Drill appropriate sized holes and install the anchors.
- 4 Secure the mounting plate to the junction box.
- 5 Screw the anchor screws into the anchors.
- 6 Connect the fixture ground wire to a suitable ground in accordance to local electrical codes.
- 7 Connect the white fixture wire to the neutral power line wire with a wire nut.
- 8 Connect the black fixture wire to the hot power line wire with a wire nut.
- 9 Mount the fixture onto the mounting plate and secure it in place with the fixture screws.
- 10 Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 11 Install the shade by placing it on the shade base.
- 12 Use one thumb screw to secure the cap to the bracket. Then place the bracket and cap onto the shade and use the other thumb screw to secure the bracket to the backplate.

SAVE THESE INSTRUCTIONS!

GENERATION LIGHTING

7400 Linder Ave, Skokie, IL 160077

800.969.3347

www.generationlighting.com

© 2019 Generation Lighting. All rights reserved.

The "Generation Lighting" graphic is a registered trademark of Generation Lighting. Generation Lighting reserves the right to change specifications for product improvements without notification.