

ASSEMBLY INSTRUCTIONS


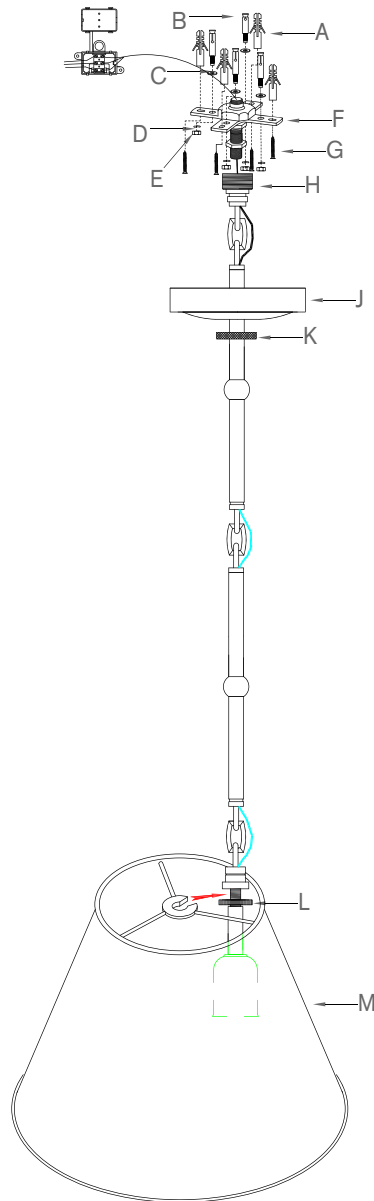


Fig. 1

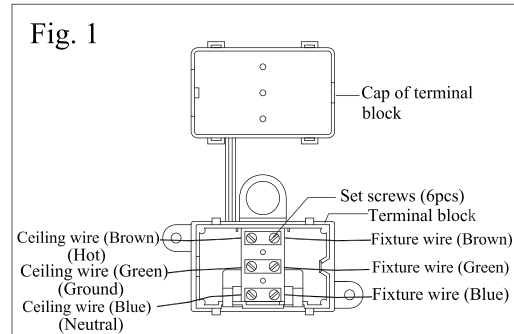

Goodman Small Hanging Loop

Item # TOB5090-EU

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- Carefully remove all parts from the carton.
- Loosen set screw at side of chain mounting loop and remove cross plate (F) with nipple from chain mounting loop (H).
- Place cross plate (F) to ceiling, use it as a template, mark center points for eight holes of cross plate (F) on the ceiling. Remove cross plate (F).
- Drill small holes on the marked points, make sure four outer holes should be big enough to accommodate with plastic anchors (A) and the four inner holes should be big enough to stud anchors (B).
- Feed wire through canopy ring (K), canopy (J), mounting loop (H) with nipple and cross plate (F).
- Remove flat washers (C) and spring washers (D) by unscrewing the hex nut (E) from stud anchors (B). Push plastic anchors (A) into the outer holes and push stud anchors (B) into inner holes, only leave threaded section of (B) outside.
- Place cross plate (F) to ceiling, letting bottom threaded section of stud anchors (B) pass through inner holes of cross plate (F) and secure with nuts (E). Note: Place flat washers (C) in between the stud anchors (B) and cross plate (F); Place spring washers (D) in between the cross plate (F) and nuts (E).
- Remove nipple from mounting loop (H) by loosening set screws at side of mounting loop (H), thread nipple into the center hole of cross plate (F) in place. Using pliers, thread one of hex nut to the cross plate (F) to secure.
- Loosen all set screws of terminal block, connect the fixture wires to one end of terminal block by inserting fixture wires and connect the ceiling wires to the another end of terminal block, tighten set screws to secure. NOTE: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED. (See Fig.1)
- Close the cap of terminal block.
- Slip canopy (J) to ceiling and secure with threaded canopy ring (K).
- Attach side opening of shade spider (located inside shade (M) (packed separately) to the threaded section on top socket and tighten with ring (L).
- Insert the specified light bulb into lampholder.
- Restore power and test fixture. Installation is completed.

CAUTION:

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.