

SURFACE TRANSFORMERS

GENERAL PRODUCT INFORMATION:



This product is ETL listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.

This product is suitable for indoor dry locations only.

A typical installation is shown. Specific installation must be in accordance with local electrical codes.

This product contains a built-in dimming coil.

This product may be dimmed only with a low voltage magnetic dimmer. Using a dimmer not designed for low voltage magnetic applications may work initially, but will eventually cause transformer failure and will void the warranty. The dimmer must be derated as indicated by the dimmer manufacturer.

This product is intended for use with Tech Lighting low voltage lighting systems only.


Read all instructions thoroughly. Read "Important Safety Information" on page 4 before proceeding with the installation.




CAUTION—RISK OF FIRE

This product requires installation by a qualified electrician. Before installing be sure to read all instructions and TURN THE POWER TO THE ELECTRICAL BOX OFF.


Install the Transformer

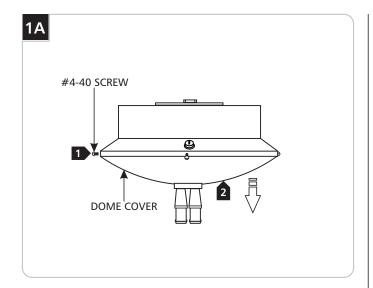


- On the side of the transformer dome cover, remove the #4-40 screws with a Phillips head screwdriver.
- 2 Lift the dome cover off of the transformer housing.

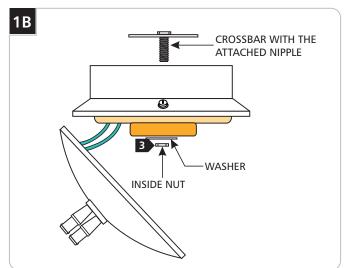


Remove the inside nut and washer to remove the crossbar with the attached nipple. **DO NOT REMOVE** the nipple from the crossbar.

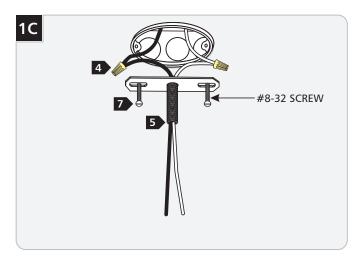

- 4 Connect the provided white and black extension wires to the neutral and hot power line wires respectively with wire nuts.
- 5 Feed the wires through the nipple.
- 6 Place all wires and wire nut connections inside the electrical box.
- Mount the crossbar with the attached nipple to the electrical box with provided #8-32 screws.

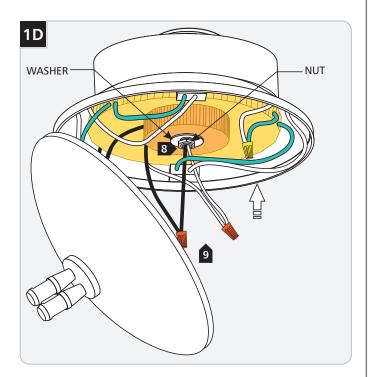


- Slip the transformer housing and washer onto the nipple and tighten the inside nut to secure the transformer housing.
- 9 Connect the black and white extension wires to the black and white transformer wires respectively with wire nuts.

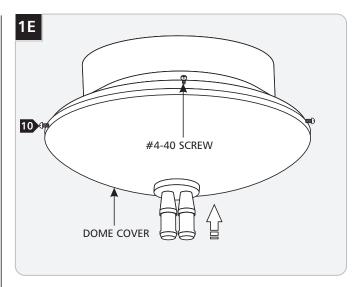


10 Replace the dome cover onto the transformer housing. Line up the dome cover holes with the transformer housing holes. Replace and tighten the #4-40 screws.

Connect the Transformer to the MonoRail

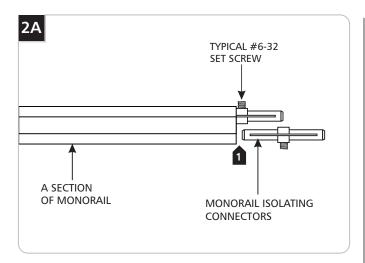

NOTE: Isolating connectors must be used inline with the MonoRail to isolate one transformer power feeds from the other.

 Insert the MonoRail insolating connectors into one MonoRail section.

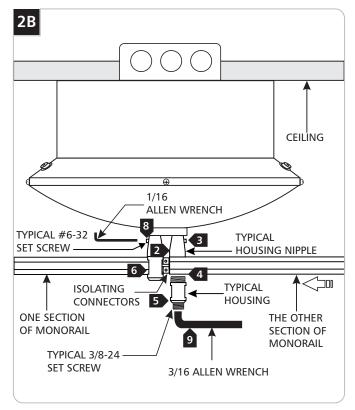

- 2 Unscrew the housing from the housing nipple.
- Loosen the #6-32 set screws on the two hosing nipples with the 1/16 Allen wrench.
- Place the MonoRail with the isolating connectors into one housing. Make sure that the MonoRail metal end does not stick out beyond the housing.
- Screw that housing nipple to the housing by twisting the housing nipple clockwise. Tighten the #6-32 set screw on the housing nipple with the 1/16 Allen wrench.
- Push the other MonoRail section onto the isolating connectors. Tighten the #6-32 set screws on the isolating connectors with the 1/16 Allen wrench.
- Place the other housing over the MonoRail and screw the housing nipple tight to the housing by twisting the housing nipple clockwise.
- Tighten the #6-32 set screw on the housing nipple with the 1/16 Allen wrench.
- Tighten the 3/8-24 set screws on the bottom of the housings with the 3/16 Allen wrench.

NOTE: This isolating connectors must be centered between the two power feed connectors.

Important Safety Information

Do not conceal or extend bus bar conductors through a building wall.

Do not install this lighting system in a damp or wet location.

To reduce the risk of fire and burns, do not install this lighting system where the uninsulated open bus bar conductors can be shorted or contact any conductive materials.

To reduce the risk of the system overheating and possibly causing a fire, make sure all the connections are tight.

Do not install fixture assemblies closer than six inches to curtains or similarly combustible materials.

Turn the electrical power off before modifying the lighting system in any way.

Only fixtures approved for use with this system may be installed.

Minimum volume of the electrical box must be 6 cubic inches (98 cubic centimeter).

Load the circuit of the transformer to no more than the maximum rated capacity as specified.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077 847.410.4400

www.techlighting.com

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company